Ecoustic Series Firmware Update Procedure:

You must use a MIDI to USB cable for this procedure.

- 1. Open "vypyrUpdater.exe" (available on www.peavey.com)
- 2. Turn the unit on and connect MIDI/USB cable from the USB connector on your PC to the MIDI jack on the amplifier.
- 3. Select "Open Firmware" in the "File" menu.
- 4. Load "ecoustic 1.17.syx" from the location in which it is stored on the PC.
- 5. Select "Out >" in the "Midi" Menu and specify the MIDI-to-USB device that is connected.
- 6. Select "Upload Code" in the "Run" menu and wait for the firmware to upload.
- 7. After the PC shows a prompt indicating that the upload is complete, disconnect the MIDI cable and cycle power to the unit via the power switch.

## Update Log:

1v17.syx: Reduces the recorded loop volume by 3dB for better performance playback.